



M2Desk

M2Desk B.V.

Medeaschouw 122

2726 KT Zoetermeer

The Netherlands

T +31 (0)79 343 6313

F +31 (0)79 343 6265

info@m2desk.com

www.m2desk.com

Manual

M2Desk Classic





Congratulations on the purchase of your M2Desk!

M2Desk is a multimedia student table where the computer is fully ergonomically justified integrated into the table surface. With this solution each student can now have access at any time to a personal computer that is integrated into their workplace. More information is available at www.m2desk.com

The use of ICT can provide a huge boost to improve the quality of education. To this end it's essential that ICT integrates into the educational process. Several studies show that use of ICT applications have a positive effect on learning achievements. However, the positive effects occur only when enough teachers and lecturers are equipped sufficiently, the support of the school organization, the technical facilities and the ICT-shape matches the vision of education.

This manual describes how to use M2Desk properly and safely. We hope you enjoy M2Desk and may it bring you a lot of success and learning efforts!

Yours sincerely,

Team M2Desk



M2Desk

Display

1. Headset (head phone and microphone)
2. Webcam
3. On / Off switch
4. HR Touchscreen (optional)



Control elements

5. Keyboard
6. Digipen for tablet (10) and for using HR Touchscreen
7. Storage bag for M2Desk keyboard and digipen



8. Unlock display to open
 9. M2Desk Battery with on both sides a whole to remove the battery.
 10. Tablet (integrated under table surface)
- Control with digipen (6)
11. Pressure points to close the display into the table




Digipen

12. Left mouse button
13. Right mouse button
14. Pen point (are registered by tablet (10), mouse movements and mouse click) and controlling HR Touchscreen



M2Desk Charger



15. M2Desk battery charger
16. M2Desk battery
17. M2Desk battery opening
18. Control panel

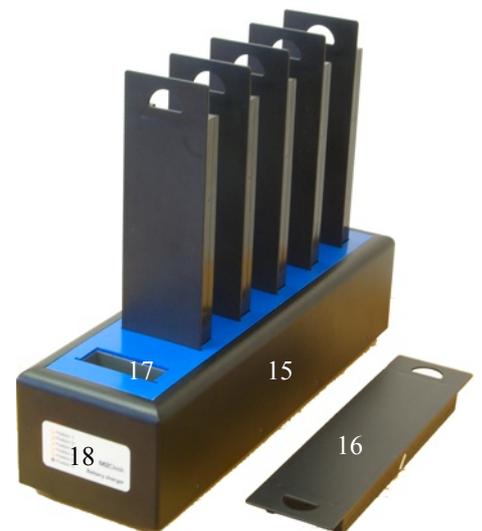

Operating en ergonomics

Unlock M2Desk display

By sliding the handles (8) backwards, the display comes up a few centimeters from its environment. You can now grab the edge of the display and put it up in the desired position that fits to the work.

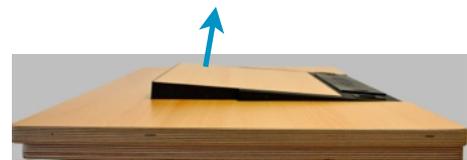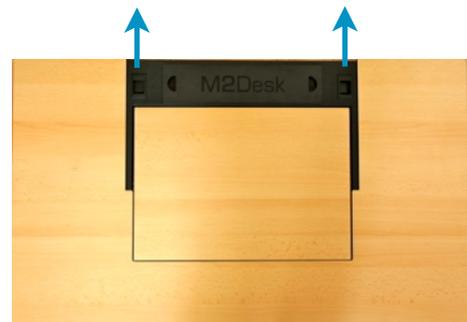

Position display


M2Desk meets all conditions and guidelines which apply for display working.

These guidelines are mandatory when working 2 hours or longer continuously behind a display.

It's however important to note, that you should also ensure a correct posture when working shorter periods.

Display working:

- Display viewing distance 50 to 70 cm
- Eye height compared to the top of the display 0 to 10 cm
- Angle of display is 70 to 80°
- Keyboard 10 to 15 cm out of table front

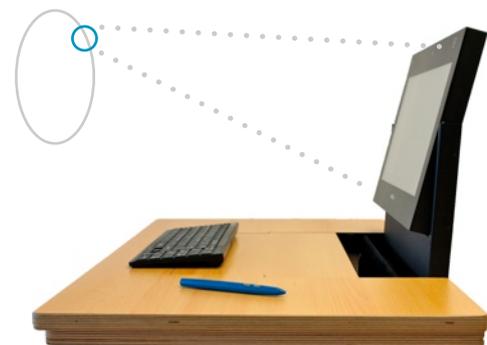

Display working




Display reading

Display reading:

- Reading distance 30 to 40 cm
- Angle of display is 45 to 60°

Display writing:

- Writing surface, the display has an angle of 10 to 15°

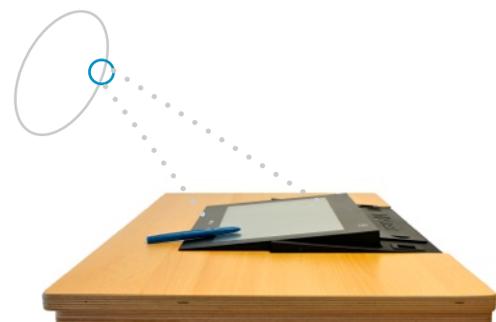

Display writing



Other possible positions of the display

Display key position:

- Display in utmost position before dummy top disappears,
- Keyboard is placed against display

In this position of the display, it's difficult for others to see or read the screen.



This mode is specially for making tests. But it does not fulfill the health and safety guidelines for display work and therefore it may not be used for working longer than 2 hours continuously.

Display flattened In table top:

- If the computer is used supportively and occasionally, this mode can be used. The table surface is fully usable and the user has a clear view.
- This position can also be used to write on the screen. More ideal for this application and for technically sound working conditions is to put it into the display writing angle (10 to 15°).




This mode is specially for making tests. But it does not fulfill the health and safety guidelines for display work and therefore it may not be used for working longer than 2 hours continuously.

Closing display

Move the display to the top of the table surface.




When the display is almost closed, push the display at the shown pressure points into the table top. The display will lock itself.

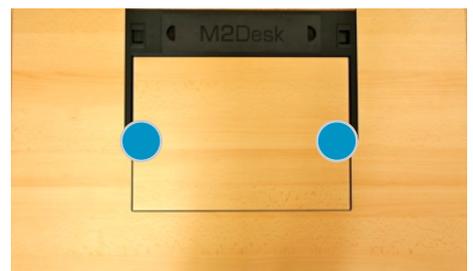

Remove battery

Use the battery holes to remove the battery from the M2Desk. You need to pull on both sides simultaneously to remove the battery.



The battery can also be lifted on one side but this is not the correct way. At this way the battery and/or connection units may damage.

